



200 Series Flat Panel LCD Monitors



C2925M-A (1/06)

Contents

Important Safety Instructions	4
Regulatory Notices	5
Description	6
Models	6
Package Contents	6
Installation	7
Desktop Stand	7
Rear Panel Connectors	7
Video and Power Connections	7
Operation	8
Front Panel Controls	8
OSD Control Menus	9
Main Menu	9
Display Adjust Menu	10
Color Temperature Menu	10
OSD Adjust Menu	11
Audio Control Menu	11
Maintenance	12
Cleaning	12
Supported Input Modes	13
Specifications	14

List of Illustrations

1 Rear Panel Connectors	7
2 Front Panel Controls	8
3 Main Menu	9
4 Display Adjust Menu	10
5 Color Temperature Menu	10
6 OSD Adjust Menu	11
7 Audio Control Menu	11

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one blade wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the points where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. Apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases shall be placed on the apparatus.
15. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
16. Installation should be done only by qualified personnel and conform to all local codes.
17. Unless this unit is specifically marked as NEMA Type 3, 3R, 3S, 4, 4X, 6, or 6P enclosure, it is designed for indoor use only and it must not be installed where exposed to rain and moisture.
18. Use only installation methods and materials capable of supporting four times the maximum specified load.
19. Only use replacement parts recommended by Pelco.
20. Avoid touching the screen directly with your fingers as the oils from your skin may be difficult to remove from the LCD.
21. Do not apply direct pressure on the screen.
22. Keep the monitor in a dust-free environment and away from strong electromagnetic fields.
23. Do not use attachments, such as mounts, that are not recommended by Pelco. They may be hazardous.
24. Do not place the monitor on an unstable stand, bracket, or mount. The unit may fall, causing serious damage to the unit or injury to a person. Only use mounts recommended by Pelco.
25. A CCC-approved power cord must be used to power this equipment when used in China.

The product and/or manual may bear the following marks:



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit

CAUTION:
RISK OF ELECTRIC SHOCK.
DO NOT OPEN.

Regulatory Notices

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RADIO AND TELEVISION INTERFERENCE

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However there is no guarantee that the interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You may also find helpful the following booklet, prepared by the FCC: "How to Identify and Resolve Radio-TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington D.C. 20402.

Changes and Modifications not expressly approved by the manufacturer or registrant of this equipment can void your authority to operate this equipment under Federal Communications Commission's rules.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Description

The 200 Series LCD monitors provide high resolution display of VGA signals. These 17- and 19-inch monitors use a color, thin film transfer (TFT) active matrix 1280 x 1024 LCD panel that automatically adapts to the appropriate input resolution.

The 200 Series' ergonomic design, autoranging internal power supply, and low power consumption, combined with quick panel response time to minimize ghosting in motion video, make the 200 Series an ideal choice for use with any DVR (digital video recorder) or PC application.

In addition, the 200 Series features a folding picture frame-style desk top stand, optional rack mount kits, and VESA®-compliant mounting holes to easily adapt to the available wall mount.


Adjustments of standard monitor display parameters are made via user-friendly, on-screen menus and front panel controls.

MODELS

PMCL217	17-inch (432 mm) active TFT LCD monitor
PMCL219	19-inch (483 mm) active TFT LCD monitor

PACKAGE CONTENTS

- 1 17- or 19-inch TFT LCD monitor
- 1 VGA cable with 15-pin, D-sub connector
- 1 US standard power cable
- 1 EU standard power cable
- 1 Sound cable
- 1 Installation/Operation manual

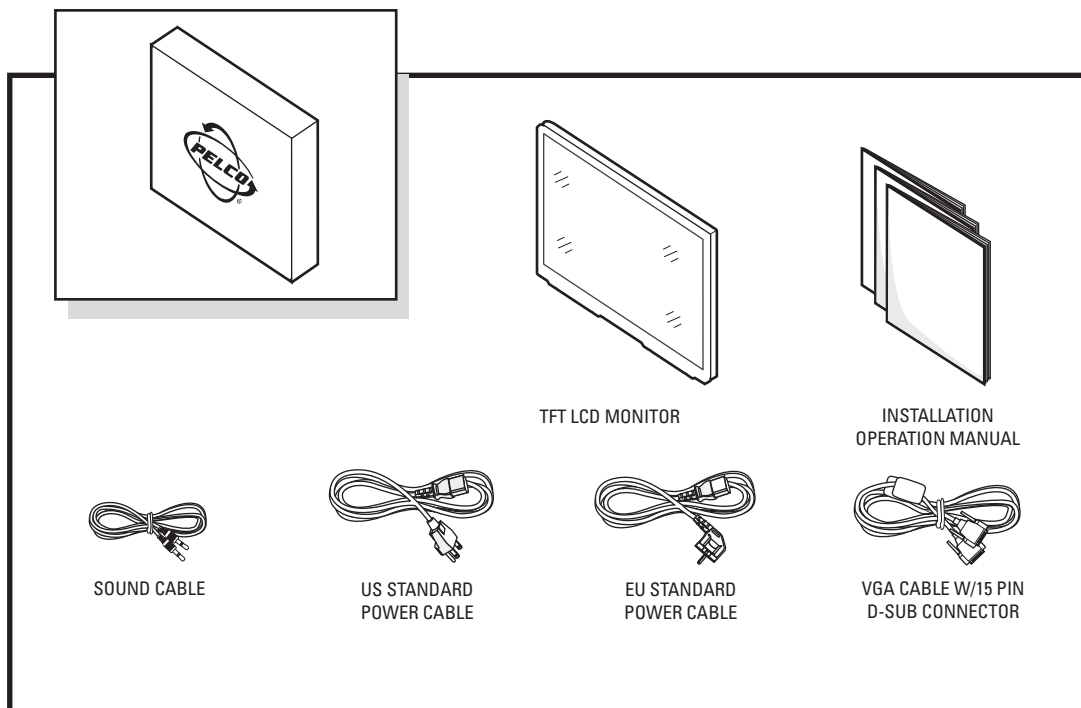

Installation

The monitor can be placed on any flat surface (desk or table), or it can be rack mounted or wall mounted.

NOTE: Only use a recommended rack mount kit, such as PMCL-RM17, PMCL-RM19, or PMCL-WM. To rack-mount the monitor, follow the instructions supplied with the rack mount kit. Refer to manual C2220M for rack mount kit instructions or C2219M for wall mount kit instructions.

DESKTOP STAND

You can manually adjust the 200 Series monitor to the viewing angle you want by repositioning the foot stand on the back of the monitor.

REAR PANEL CONNECTORS

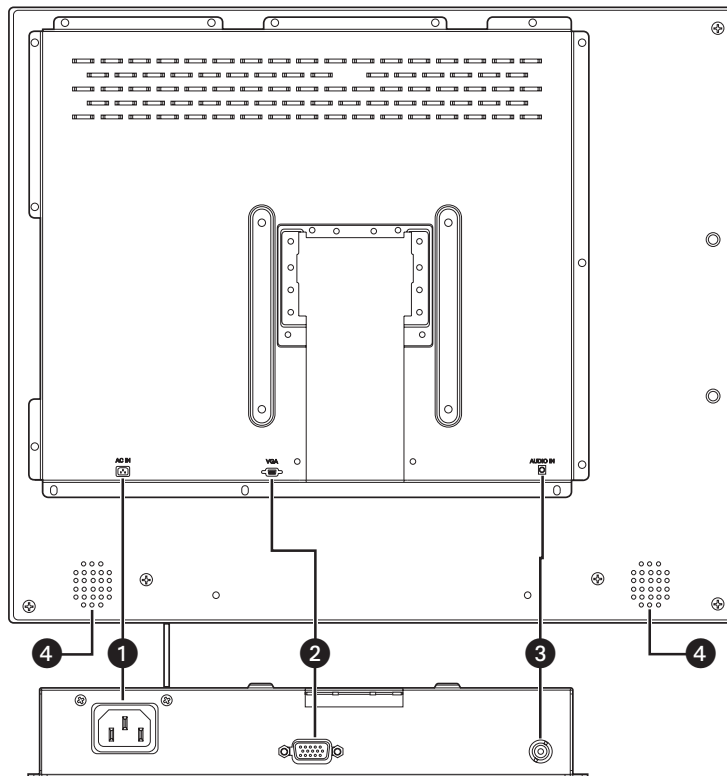


Figure 1. Rear Panel Connectors

1. **AC IN:** This can be connected to a 100-240 VAC, 50/60 Hz source.
2. **VGA IN:** This can be connected to the VGA cable (supplied).
3. **AUDIO IN:** This connection can bring in stereo audio from any sound source.
4. **Speakers:** The unit has two built-in speakers.

VIDEO AND POWER CONNECTIONS

Refer to Figure 1 for video, audio, and power connections.

1. Connect a PC or DVR to VGA IN on the back panel of the monitor.
2. Connect audio. Connect the audio cable from the stereo output source to the AUDIO IN connection on the back panel.
3. Connect power. Plug the provided power cord into the AC IN connection on the back panel. Plug the other end of the cord into a power receptacle.

Operation

FRONT PANEL CONTROLS

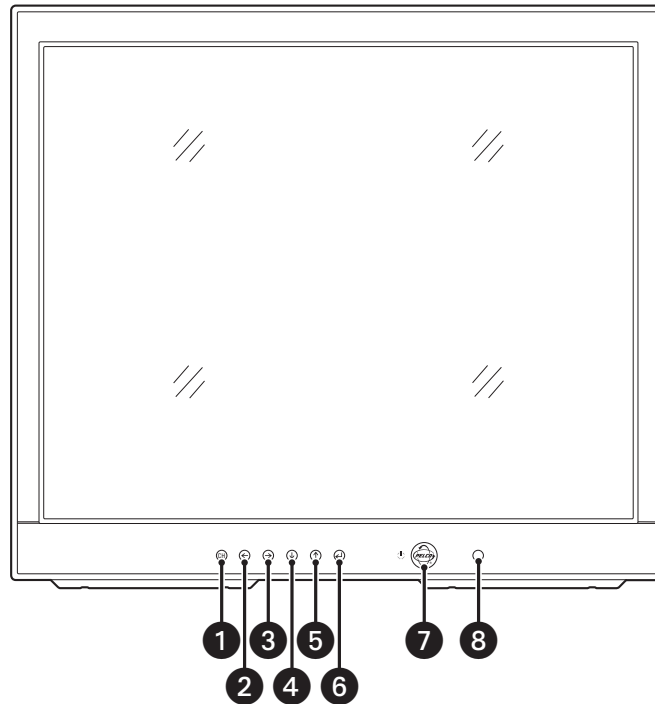


Figure 2. Front Panel Controls

1. This button automatically selects the input signal.
2. This button decreases the value of a selected menu item or opens the Volume menu and decreases volume.
3. This button increases the value of a selected menu item or opens the Volume menu and increases volume.
4. This button moves the highlighter downward through a menu.
5. This button moves the highlighter upward through a menu.
6. This menu button accesses the pop-up menu and is also used to select a highlighted menu item.
7. This button turns on or off power to the monitor.
8. Infrared sensor (400 Series monitors only).

OSD CONTROL MENUS

Unless otherwise noted, the menus are the same for the PMCL217 and PMCL219.

To use the menus:

- 1. Press the menu button to access the Main menu.
- 2. Use the up and down arrow buttons to highlight a selection.
- 3. Press the menu button to select an item.
- 4. Use the left and right arrow buttons to adjust the setting on a selected item.

MAIN MENU

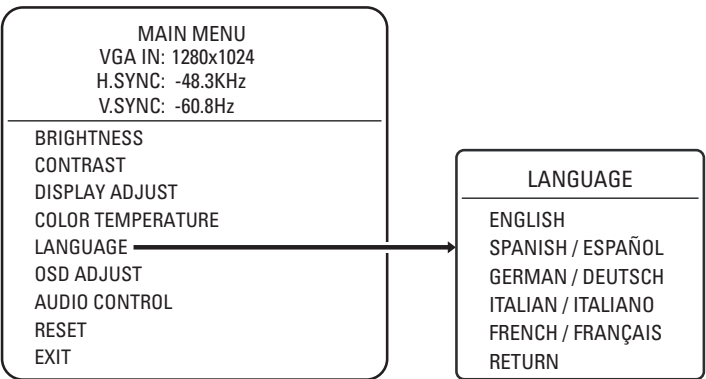


Figure 3. Main Menu

The Main menu is accessed by pressing the menu button on the monitor’s front panel. After selecting a highlighted item with the menu button, use the left and right arrow buttons to adjust the setting.

Main Menu Field Definitions

Brightness: Adjusts the black level of the video screen image.

Contrast: Adjusts the white level of the video screen image.

Display Adjust: Accesses the Display Adjust menu.

Color Temperature: Adjusts the color temperature to 9300K, 7500K, 6500K, or User Preset.

Language: Lets you choose among five languages: English, Spanish, German, Italian, or French.

OSD Adjust: Accesses the OSD (on-screen display) Adjust menu.

Audio Control: Accesses the Audio Control menu.

Reset: Returns all controls to factory settings.

Exit: Exits the menu system.

DISPLAY ADJUST MENU

DISPLAY ADJUST	
V-POSITION	050
H-POSITION	080
PITCH	050
PHASE	058
SHARPNESS	000
AUTO TUNING	
RECALL	
RETURN	

Figure 4. Display Adjust Menu

Display Adjust Menu Field Definitions

- V-Position:** Moves the screen image up or down.
- H-Position:** Moves the screen image left or right.
- Pitch:** Adjusts image distortion appearing as vertical bars or noise on the screen.
- Phase:** Adjusts image distortion appearing as horizontal noise on the screen.
- Sharpness:** Adjusts the picture softer or sharper.
- Auto Tuning:** Adjusts the above settings automatically for the best display.
- Recall:** Restores this submenu's settings to the factory defaults.
- Return:** Takes you back to the Main menu.

COLOR TEMPERATURE MENU

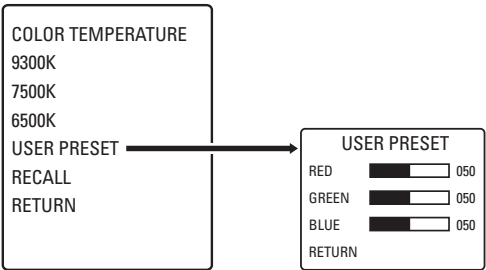


Figure 5. Color Temperature Menu

Color Temperature Menu Field Definitions

- 9300K, 7500K, 6500K:** These settings change the color temperature to suit your preference. Low color temperature implies warmer (more yellow/red) light while high color temperature implies a colder (more blue) light. The unit of measurement is Kelvin (K).
- User Preset:** Accesses the User Preset submenu. The options are as follows:
- Red, Green, Blue:** These settings let you customize the color temperature to your own preference by adjusting the amount of red, green, and blue.
 - Return:** Takes you back to the previous menu.
- Recall:** Restores this menu's settings to the factory default.
- Return:** Takes you back to the main menu.

OSD ADJUST MENU

OSD ADJUST	
OSD H-POS	049
OSD V-POS	049
OSD TIMER	020
OSD TRANSPARENCY	054
RECALL	
RETURN	

Figure 6. OSD Adjust Menu

OSD Adjust Menu Field Definitions

OSD H-Pos: Moves the OSD menu box left or right.

OSD V-Pos: Moves the OSD menu box up or down.

OSD Timer: Sets the number of seconds the menu remains on the screen. The maximum setting is 104.

OSD Transparency: Adjusts the transparency of the OSD menu box.

Recall: Restores this submenu's settings to the factory defaults.

Return: Takes you back to the Main menu.

AUDIO CONTROL MENU


AUDIO CONTROL	
MUTE	OFF
VOLUME	 050
RECALL	
RETURN	

Figure 7. Audio Control Menu

Audio Control Menu Field Definitions

Mute: Toggles muting on or off. Use the arrow keys to toggle on or off and press the menu button to select.

Volume: Controls the volume. Highlight and use the left or right arrow keys to increase or decrease the volume. Press the menu button to select.

Recall: Restores this submenu's settings to the factory defaults.

Return: Takes you back to the Main menu.

Maintenance

If the quality of the picture is poor and cannot be improved by making adjustments on the front control panel, inspect all system connections and cable runs.

To reduce the risk of electrical shock, do not remove the cover or back of the monitor. No user-serviceable parts are inside. Refer servicing to qualified personnel, or contact the Pelco Customer Service Department for assistance. Refer to the *Product Warranty and Return Information*.

CLEANING

- Gently wipe your screen with a clean camel hair brush or a soft, clean, lint-free cloth.
- Gently apply pressure to the screen surface to clean the display.
- Do not spray *any* liquid directly on the screen or the LCD monitor casing.
- Chemical cleaners can damage the screen or the LCD monitor casing.

Supported Input Modes

Mode	Resolution	H Freq (kHz)	V Freq (Hz)
0	720 x 350	31.469	70.087
1	640 x 480	31.469	59.940
2	640 x 480	35.000	66.667
3	640 x 480	37.861	72.809
4	640 x 480	37.500	75.000
5	720 x 400	31.469	70.087
6	800 x 600	35.156	56.250
7	800 x 600	37.879	60.317
8	800 x 600	48.077	72.188
9	800 x 600	46.875	75.000
10	832 x 624	49.750	74.500
11	1024 x 768	48.363	60.004
12	1024 x 768	56.476	70.069
13	1024 x 768	58.038	71.918
14	1024 x 768	60.023	75.029
15	1280 x 1024	64.000	60.000
16	1280 x 1024	80.000	75.000

Specifications

MODELS

PMCL217	17-inch (432 mm) active TFT LCD monitor
PMCL219	19-inch (483 mm) active TFT LCD monitor

GENERAL

LCD Panel Pixel Array	1280 X 1024, 75 Hz
Panel Aspect Ratio	5:4 VGA
Viewing Area	
PMCL217	338 x 270 mm
PMCL219	376 x 301 mm
Pixel Pitch	
PMCL217	0.264 x 0.264 mm
PMCL219	0.294 x 0.294 mm
Brightness	
PMCL217	300 cd/m ²
PMCL219	250 cd/m ²
Contrast Ratio	500:1
Backlight Type	4 CCFL
Panel Lamp Life	40,000 hours
Viewing Angle (H/V)	
PMCL217	140°/130°
PMCL219	150°/130°
Tilt	<10° to >45°
Display Colors	
PMCL217	16.2 million
PMCL219	16.7 million
Response Time	12 ms
Speakers	2, integrated, 1 watt each
Front Panel Controls	Automatic tuning, menu, access and navigation, power
Indicators	LED (power on/off), on-screen ("no signal")

ELECTRICAL

Input Voltage	100-240 VAC, 50/60 Hz, internal power supply
Power Consumption	<50 W (on), <5 W (standby)
Input Interfaces	
Video	1, 15-pin D-sub
Audio	1 (L/R), RCA
Horizontal Frequency	30 kHz to 80 kHz
Vertical Frequency	56 Hz to 75 Hz

PHYSICAL

Dimensions	
PMCL217	15.0" W x 13.4" H x 3.2" D (38.1 x 34.1 x 8.0 cm)
PMCL219	16.6" W x 14.7" H x 3.3" D (42.1 x 37.4 x 8.3 cm)
Unit Weight	
PMCL217	12.4 lb (5.6 kg)
PMCL219	14.4 lb (6.5 kg)
Shipping Weight	
PMCL217	16.0 lb (7.3 kg)
PMCL219	19.0 lb (8.6 kg)

ENVIRONMENTAL

Operating Temperature	32° to 104°F (0° to 40°C)
Storage Temperature	-4° to 140°F (-20° to 60°C)
Operating Humidity	20% to 85% noncondensing
Storage Humidity	5% to 90% noncondensing

PRODUCT WARRANTY AND RETURN INFORMATION

WARRANTY

Pelco will repair or replace, without charge, any merchandise proved defective in material or workmanship **for a period of one year** after the date of shipment.

Exceptions to this warranty are as noted below:

- Five years on FT/FR8000 Series fiber optic products.
- Three years on Genex® Series products (multiplexers, server, and keyboard).
- Three years on Camclosure® and fixed camera models, except the CC3701H-2, CC3701H-2X, CC3751H-2, CC3651H-2X, MC3651H-2, and MC3651H-2X camera models, which have a five-year warranty.
- Three years on PMCL 200/300/400 Series LCD monitors.
- Two years on standard motorized or fixed focal length lenses.
- Two years on Legacy®, CM6700/CM6800/CM9700 Series matrix, and DF5/DF8 Series fixed dome products.
- Two years on Spectra®, Esprit®, ExSite™, and PS20 scanners, including when used in continuous motion applications.
- Two years on Esprit® and WW5700 Series window wiper (excluding wiper blades).
- Two years (except lamp and color wheel) on Digital Light Processing (DLP®) displays. The lamp and color wheel will be covered for a period of 90 days. The air filter is not covered under warranty.
- Eighteen months on DX Series digital video recorders, NVR300 Series network video recorders, Endura™ Series distributed network-based video products, and TW3000 Series twisted pair transmission products.
- One year (except video heads) on video cassette recorders (VCRs). Video heads will be covered for a period of six months.
- Six months on all pan and tilts, scanners or preset lenses used in continuous motion applications (that is, preset scan, tour and auto scan modes).

Pelco will warrant all replacement parts and repairs for 90 days from the date of Pelco shipment. All goods requiring warranty repair shall be sent freight prepaid to Pelco, Clovis, California. Repairs made necessary by reason of misuse, alteration, normal wear, or accident are not covered under this warranty.

Pelco assumes no risk and shall be subject to no liability for damages or loss resulting from the specific use or application made of the Products. Pelco's liability for any claim, whether based on breach of contract, negligence, infringement of any rights of any party or product liability, relating to the Products shall not exceed the price paid by the Dealer to Pelco for such Products. In no event will Pelco be liable for any special, incidental or consequential damages (including loss of use, loss of profit and claims of third parties) however caused, whether by the negligence of Pelco or otherwise.

The above warranty provides the Dealer with specific legal rights. The Dealer may also have additional rights, which are subject to variation from state to state.

If a warranty repair is required, the Dealer must contact Pelco at (800) 289-9100 or (559) 292-1981 to obtain a Repair Authorization number (RA), and provide the following information:

1. Model and serial number
2. Date of shipment, P.O. number, Sales Order number, or Pelco invoice number
3. Details of the defect or problem

If there is a dispute regarding the warranty of a product which does not fall under the warranty conditions stated above, please include a written explanation with the product when returned.

Method of return shipment shall be the same or equal to the method by which the item was received by Pelco.

RETURNS

In order to expedite parts returned to the factory for repair or credit, please call the factory at (800) 289-9100 or (559) 292-1981 to obtain an authorization number (CA number if returned for credit, and RA number if returned for repair).

All merchandise returned for credit may be subject to a 20% restocking and refurbishing charge.

Goods returned for repair or credit should be clearly identified with the assigned CA or RA number and freight should be prepaid. Ship to the appropriate address below.

If you are located within the continental U.S., Alaska, Hawaii or Puerto Rico, send goods to:

Service Department
Pelco
3500 Pelco Way
Clovis, CA 93612-5699

If you are located outside the continental U.S., Alaska, Hawaii or Puerto Rico and are instructed to return goods to the USA, you may do one of the following:

If the goods are to be sent by a COURIER SERVICE, send the goods to:

Pelco
3500 Pelco Way
Clovis, CA 93612-5699 USA

If the goods are to be sent by a FREIGHT FORWARDER, send the goods to:

Pelco c/o Expeditors
473 Eccles Avenue
South San Francisco, CA 94080 USA
Phone: 650-737-1700
Fax: 650-737-0933



This equipment contains electrical or electronic components that must be recycled properly to comply with Directive 2002/96/EC of the European Union regarding the disposal of waste electrical and electronic equipment (WEEE). Contact your local dealer for procedures for recycling this equipment.

REVISION HISTORY

Manual #	Date	Comments
C2925M	12/05	Original version.
C2925M-A	1/06	For the PMCL217, changed diagonal screen size to 432 mm. For the PMCL219, changed unit depth to 3.3 inches (8.3 cm).

Pelco, the Pelco logo, Camclosure, Esprit, Genex, Legacy, and Spectra are registered trademarks of Pelco.
Endura and ExSite are trademarks of Pelco.
DLP is a registered trademark of Texas Instruments, Inc.
VESA is a registered trademark of the Video Electronics Standards Association.

© Copyright 2006, Pelco. All rights reserved.



Worldwide Headquarters
3500 Pelco Way
Clovis, California 93612 USA

USA & Canada
Tel: 800/289-9100
Fax: 800/289-9150

International
Tel: 1-559/292-1981
Fax: 1-559/348-1120

www.pelco.com

ISO9001

United States | Canada | United Kingdom | The Netherlands | Singapore | Spain | Scandinavia | France | Middle East